



Foot Pedal Service Bulletin

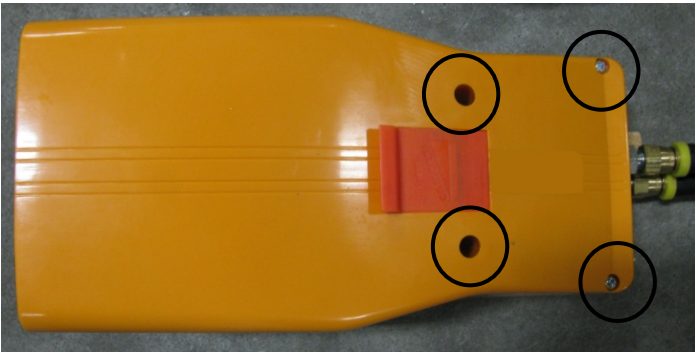


Remove the 4 Phillips screws from the foot pedal body and remove the cover.



This is the spool valve you will need to remove for servicing

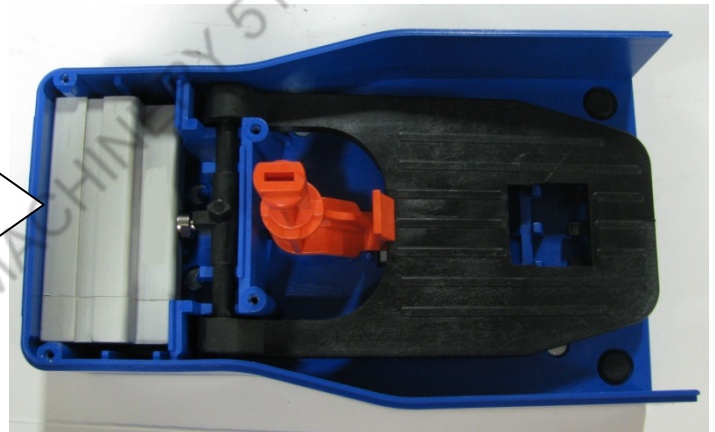

Remove the rubber stoppers on the end where the spool valve is located.

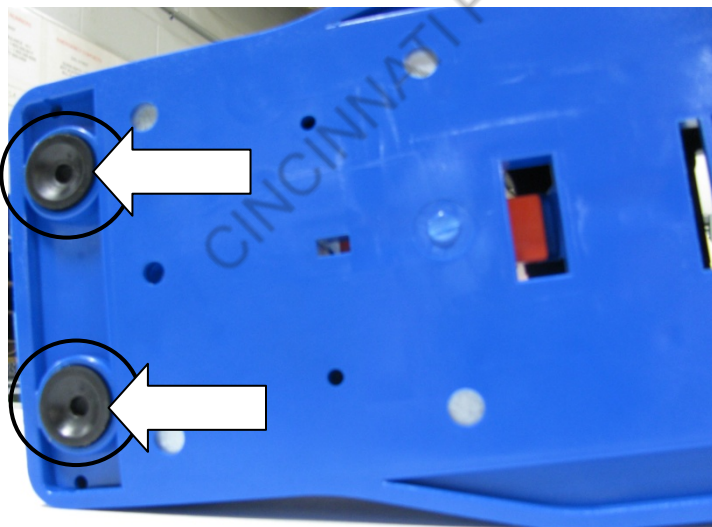

Once the rubber stoppers are removed, take a punch and very gently tap out the spool valve.

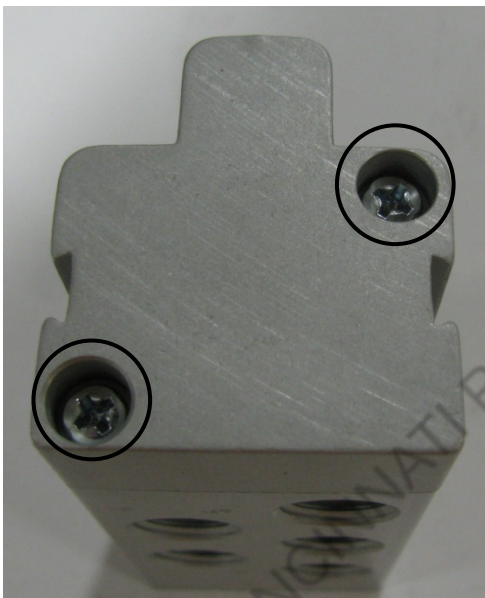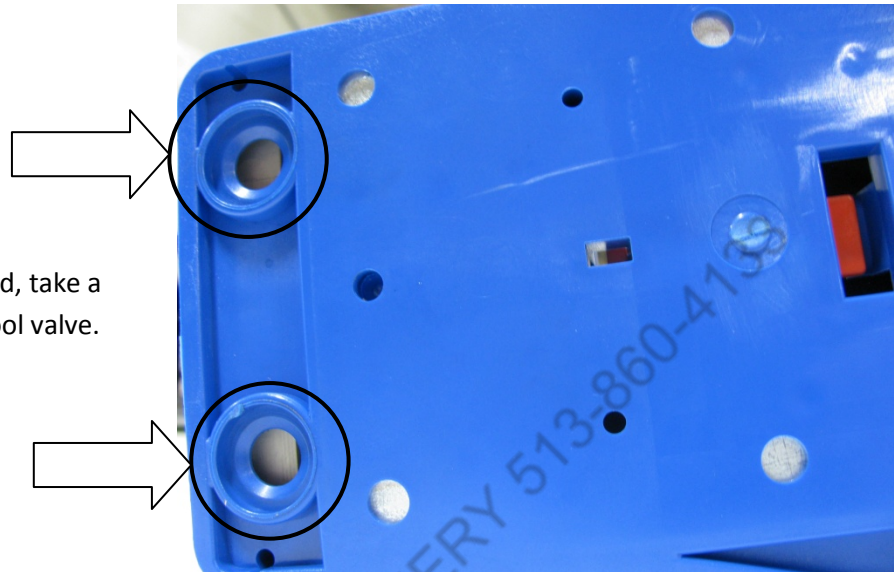

Remove the 2 Philips screws from the spool valve cap.

With the spool valve cap removed, gently remove the spool from the valve body. Clean with WD40 and lubricate with air tool oil.

Reassemble foot pedal and test. If the foot pedal does not operate you will need a new foot pedal (part number 200496).

